

## Installation and operation manual

### CLEARPOINT® Activated carbon filter

> S040  
> S050  
> S055

> S075  
> M010  
> M012

> M015  
> M018  
> M020  
> M022  
> M023

> M025  
> M027  
> M030  
> M032

## ■ Table of contents

<b>1. General</b>	<b>4</b>
1.1 Contact	4
1.2 Information regarding installation and operation manual	4
1.3 Other applicable documents	4
1.4 Explanation of the symbols and pictograms utilised	5
1.4.1 In the documentation	5
1.4.2 On the device	6
1.5 Intended use	7
1.6 Reasonably foreseeable inappropriate use	8
1.7 Legal warranty and liability for property defects	8
1.8 Target group and personnel	9
1.9 Responsibility of the operating company	9
<b>2. Safety-related information</b>	<b>10</b>
2.1 General instructions	10
2.2 Safety instructions	11
<b>3. Transport and storage</b>	<b>12</b>
<b>4. Product information</b>	<b>13</b>
4.1 Product description	13
4.2 Product overview	13
4.3 Product identification	14
4.4 Function description	16
4.4.1 Filtration	16
4.4.2 Oil indicator	17
4.5 Scope of delivery	18
4.6 Type plate	19
4.7 Filter element sticker	20
4.8 Maintenance label for filter element replacement	20
<b>5. Technical data</b>	<b>21</b>
5.1 Filter performance data	21
5.2 Filter element performance data	22
5.3 Materials	22
<b>6. Dimensions</b>	<b>23</b>
<b>7. Assembly</b>	<b>25</b>
7.1 Warning notices	25
7.2 Assembly work	26
<b>8. Commissioning</b>	<b>28</b>
8.1 Commissioning tasks	28
<b>9. Maintenance and servicing</b>	<b>29</b>
9.1 Maintenance schedule	29
9.2 Cleaning	29
9.2.1 Warning notices	29
9.2.2 Cleaning work	30
9.3 Visual inspection	30
9.4 Replacement of the testing tube	30
9.5 Replacement of the filter element	31
9.6 Leakage test	34

---


<b>10. Decommissioning</b> .....	<b>35</b>
<b>11. Disassembly</b> .....	<b>36</b>
11.1 Warning notices .....	36
11.2 Disassembly work.....	37
<b>12. Disposal</b> .....	<b>39</b>
12.1 Warning notices .....	39
12.2 Disposal work .....	39
<b>13. Spare parts and accessories</b> .....	<b>40</b>
13.1 Spare parts .....	40
13.2 Accessories attachment components top .....	41
13.3 Accessories attachment components bottom.....	42
<b>14. Fault and trouble shooting / FAQ</b> .....	<b>43</b>
<b>15. Product approvals and registration marks</b> .....	<b>43</b>

# 1. General

## 1.1 Contact

Manufacturer	Customer service and tools
<b>BEKO TECHNOLOGIES GmbH</b>  Im Taubental 7   D-41468 Neuss Tel. + 49 2131 988 - 1000 info@beko-technologies.com www.beko-technologies.com	<b>BEKO TECHNOLOGIES GmbH</b>  Im Taubental 7   D-41468 Neuss Tel. + 49 2131 988 - 1000 service-eu@beko-technologies.com www.beko-technologies.com


## 1.2 Information regarding installation and operation manual

INFORMATION	Copyright protection
	The contents of the installation and operation manual in the form of text, figures, illustrations, photographs, technical drawings, diagrams and other representations are protected by the copyright of the manufacturer. This applies especially to duplication, reproduction, microfilming and storage as well as processing in electronic systems.

Publication date	Revision status	Reason for amendment	Scope of amendment
31/10/2018	00_01	Changes to standards and regulations	Completely new version

The installation and operation manual, hereinafter referred to as the manual, must always be stored close to the product and be in a permanently legible condition.

The manual must be handed over along with the product if it is sold or passed on.

NOTE	Follow the instructions given in the manual!
	This manual contains all the basic information required for safe operation of the product and must therefore be read before any actions are performed. Otherwise personal and material hazards as well as malfunction and device failure can occur.

## 1.3 Other applicable documents











This manual contains all the necessary steps for installation and operation of the CLEARPOINT® activated carbon filter. More detailed information about the installation and operation of the accessories is contained in the following installation and operation manual:

- CLEARPOINT® Differential pressure gauge
- CLEARPOINT® Oil indicator




## 1.4 Explanation of the symbols and pictograms utilised

The symbols and pictograms utilised below indicate safety-relevant and important information which must be adhered to when handling the operating material and to ensure safe and optimum operation.

### 1.4.1 In the documentation

Symbol/Pictogram	Description/Explanation
	General hazard symbol (danger, warning, caution)
	Pressurised system
	Note the installation and operating manual
	General instructions
	Wear respiratory protection FFP 3
	Wear safety footwear
	Wear protective gloves (fluid-resistant)
	Wear hearing protection
	Wear safety goggles with side shields
	General information

## 1.4.2 On the device

Symbol/Pictogram	Description/Explanation
	<p><b>General hazard symbol (danger, warning, caution)</b>            (This symbol can be found on the type plate and on the maintenance sticker for filter element replacement.)</p>
	<p><b>Maintenance sticker for filter element replacement</b>            When the next scheduled filter element replacement is due is marked on this sticker, and that the installation and operation manual should be followed.</p>
	<p><b>Filter element sticker</b>            This sticker is located on the base of the filter element and provides information about the filter element and the direction of flow.</p>

## 1.5 Intended use

### **CLEARPOINT® filters and accessories**

The CLEARPOINT® activated carbon filter, also referred to as filter below, is used for the filtration of aerosols and solid particles in compressed gas systems. For efficient separation, the compressed gas must be treated by prior filtration and drying in such a way that it is almost free of particles and aerosols.

Any use of this system other than the use described in this manual is hereby deemed to be non-intended and can cause a hazard for the safety of users and the environment.

- Only use filters and accessories within the operating parameters given in the technical data and the agreed delivery conditions.
- Only use filters and accessories within a pipeline system designed for the technical data with appropriate connections, pipe diameters and assembly clearance.
- Only use the filters and accessories for the treatment of compressed gases of fluid group 2 according to Pressure Equipment Directive 2014/68/EU which are free of aggressive and corrosive components.
- Only use filters and accessories in non-explosive hazardous areas.
- Only use filters and accessories away from direct solar radiation and heat sources as well as areas subject to frost.
- Only combine the filters and accessories with the products named and recommended by **BEKO TECHNOLOGIES GMBH** in the manual.

Before using the filters, the operating company must make sure that all conditions and prerequisites for intended use are given.

The filter is exclusively designed for stationary use in a commercial or industrial area. All the assembly, installation, operation, disassembly and disposal work described may only be performed by qualified skilled personnel.

## 1.6 Reasonably foreseeable inappropriate use

Reasonably foreseeable inappropriate use is deemed to have occurred if the filter or any accessories are used in any other way than that described in the chapter "Intended use". Reasonably foreseeable inappropriate use includes the use of the product in a manner not intended by the manufacturer or supplier but which may result from foreseeable human behaviour.

Reasonably foreseeable inappropriate use includes:

- Executing of modifications of all kinds, in particular design and process engineering interventions, as these can lead to personal injury and material damage as well as malfunction and device failure.
- The overriding, bridging or non-application of existing or recommended safety devices.
- The use for treatment of compressed gases which are not included in fluid group 2 in accordance with PED 2014/68/EU or contain aggressive components. In cases of doubt a gas/condensate analysis must be carried out.

This list is not exhaustive as not all possible inappropriate use can be foreseen in advance. If the operating company is aware of any inappropriate use of the filter or accessories which are not listed here, the manufacturer must be informed immediately.

## 1.7 Legal warranty and liability for property defects

The operating company and user must take into account the intended use. The operating company and user will be completely liable for every not described action and utilisation which exceeds the stated intended use.

All liability or warranty claims will be invalidated insofar as the filter is not operated according to the intended use or is operated outside the limits specified in the technical data.


This includes:

- inappropriate technical installation, commissioning, servicing, maintenance or operation
- the use of defective components
- non-compliance with the safety-relevant information, procedure and instruction contained in this manual
- the performance of any kind of modification, in particular constructive and process technology interventions on the product
- the use of third-party spare parts or accessories, which have not been approved by the manufacturer, during maintenance and repair work
- Non-compliance with servicing, maintenance and inspection intervals



## 1.8 Target group and personnel

This manual addresses the specialist personnel listed below who are involved with work on the filter or the accessories.

INFORMATION	Personnel requirements
	<p>The personnel may not execute any actions on the filter or the accessories when they are under the influence of drugs, medications, alcohol or other substances that may impair their consciousness.</p>

### Skilled personnel- Transport and storage

Skilled personnel - Transport and storage are people who, due to their training, professional experience and qualifications, have all the necessary skills to safely execute all actions in connection with the transport and storage of the operating material, to instruct, to recognise possible dangerous situations independently and to execute measures to avoid danger.  
 Skills include experience with hoists, forklifts and lifting equipment and knowledge of local laws, standards and guidelines relating to transport and storage.

### Qualified personnel - compressed gas technology

Skilled personnel - compressed gas technology are people who, due to their training, professional experience and qualification, possess all the necessary capabilities to safely execute actions, and instruct all actions related to compressed gases and pressurised systems, to independently foresee potential hazardous situations and implement appropriate measures to avert any danger.  
 The capabilities include, in particular, experience in handling measurement and control technology as well as knowledge of the regionally applicable laws, standards and regulations for compressed gas technology.

## 1.9 Responsibility of the operating company

The responsible operating company must ensure the following to prevent accidents, faults and adverse effects on the environment:

- Before all actions, check to ensure that the manual available does in fact belong to the product.
- Always use, maintain and service the product properly.
- All applicable statutory requirements, safety regulations and accident prevention regulations have been adhered to.
- All regulations and operation manual for safe working and information regarding behaviour in the event of accidents and fires at the operating location are accessible to personnel at all times.
- The product is used with recommended and fully operable safety devices that are not overridden.
- Always have assembly, installation and maintenance work carried out by qualified skilled personnel only.
- Personnel have the recommended personal protective equipment at their disposal and it is used.
- Appropriate technical safety measures have been implemented to ensure that the permissible operating parameters are not exceeded or undershot.

## 2. Safety-related information

### 2.1 General instructions

Safety instructions warn against residual risks when handling the product. Warning notices in the instructional text precede the procedure that poses a hazard to personnel or the environment.


These safety and warning notices must be strictly observed in order to prevent accidents, personal injury, damage to property and impairments during operation.

#### Structure of the safety instructions

The content of the safety instructions is based on the **SAFE principle**:

- S - Safety symbol and signal word
- A - Type and source of danger
- F - Possible consequences of disregarding the danger in the order of its severity
- E - Measures to prevent danger

#### Structural design of the safety instructions:

SIGNAL WORD	Type and source of danger!
 Safety symbol	Possible consequences if the danger is ignored
	<ul style="list-style-type: none"> <li>• Measure to prevent the danger</li> </ul>






#### Signal words according to ISO 3864 and ANSI Z.535.6

<b>DANGER</b>	<b>Imminent hazard</b> Consequences of non-compliance: Death or serious personal injury
<b>WARNING</b>	<b>Imminent hazard</b> Consequences of non-compliance: Death or serious personal injury are possible
<b>CAUTION</b>	<b>Potential danger</b> Consequences of non-compliance: injury and/or damage to property
<b>NOTE</b>	<b>Additional notes, information, tips</b> Consequences of non-compliance: Disadvantages during operation, actions and maintenance. No danger to people or regarding the safe operation.



## 2.2 Safety instructions

In order to prevent accidents, personal injury and damage to the device as well as impairments during operation, it is essential to adhere to the specified safety and warning notices.


The personal protective equipment specified in the safety instructions must be selected and made available by the operating company depending on the system parameters and properties.

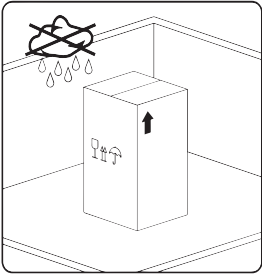
<b>DANGER</b>	<b>Operation of plant outside the permissible limit range!</b>
	Operation of the product outside the permissible limits and operating parameters, unauthorised intervention and modifications may result in death or serious injury.
	<ul style="list-style-type: none"> <li>• For safe operation of the product, always adhere to the limit values, operating parameters and maintenance intervals as well as the set-up and ambient parameters specified on the type plate and in the manual.</li> <li>• Inspect whether the operating parameters have been amended or restricted by the use of accessories.</li> <li>• Only use the product for its intended use.</li> </ul>
<b>DANGER</b>	<b>Pressurised system!</b>
	Death or serious personal injury can result through contact with fast or suddenly escaping compressed air or through bursting system parts
	<ul style="list-style-type: none"> <li>• All work on the system must be carried out in the depressurised state and with the system secured against unintentional pressure build-up.</li> <li>• Set up a safety zone around the system during all assembly, installation, maintenance and repair work.</li> <li>• Before applying pressure to the system, check all pipe connections and tighten if necessary.</li> <li>• Slowly pressurise the system with compressed gas.</li> <li>• Avoid pressure blows and high differential pressures.</li> <li>• Assemble all pipes without mechanical stress. Avoid any vibrations occurring in the pipe network by using vibration dampers.</li> <li>• Always keep exactly to the installation and operating instructions given in this manual.</li> <li>• Always keep inspection and maintenance interval exactly.</li> <li>• Install fixed pipes as supply and discharge drains.</li> <li>• Do not carry out any structural changes to the product.</li> </ul>
<b>DANGER</b>	<b>Use of incorrect spare parts, accessories or installation materials!</b>
	The use of incorrect spare parts, accessories or installation materials, as well as auxiliary and operating materials, may result in death or serious injury. In addition, malfunction and device failure or material damage can occur.
	<ul style="list-style-type: none"> <li>• For all installation, servicing and maintenance work, only use undamaged original parts, auxiliary and operating materials which are specified by the manufacturer.</li> <li>• Only use fittings and connecting elements approved for the respective application as well as suitable tools in perfect operating condition.</li> <li>• Only use cleaned pipes that are free of dirt and corrosion.</li> </ul>
<b>WARNING</b>	<b>Non-application of personal protective equipment!</b>
	Non-application of personal protective equipment or the use of sub-standard protective equipment can lead to accidents or personal injuries during work on the product.
	<ul style="list-style-type: none"> <li>• The personal protective equipment recommended, which must be in a flawless condition, must be worn during all work on the product.</li> <li>• Inspect the personal protective equipment regularly for flawlessness and functionality and replace damaged parts immediately.</li> </ul>
<b>WARNING</b>	<b>Insufficient qualification!</b>
	Insufficient qualification of the personnel can lead to accidents, personal injury and damage to the device as well as impairments during work on the operating material.
	All work on the product may only be carried out by appropriately qualified skilled personnel.

### 3. Transport and storage

<b>WARNING</b>	<b>Insufficient qualification!</b>
	Insufficient qualification of the personnel can lead to accidents, personal injury and damage to the device as well as impairments during work on the operating material.
	The work on the operating material described below must only be executed by specialist personnel during transport and storage.
<b>CAUTION</b>	<b>Inappropriate transport or storage!</b>
	Inappropriate transport or storage may result in personal injury or damage to the device.
	<ul style="list-style-type: none"> <li>• Wear protective gloves when working with packaging material</li> <li>• Use personal protective equipment, inspect it regularly for faultlessness and functionality and replace damaged parts immediately.</li> <li>• The operating material may only be transported or stored by qualified personnel.</li> <li>• Handle packaging and operating material with care.</li> <li>• Pack all parts impact-proof using suitable material.</li> <li>• Transport and handle the packaging according to the markings (observe lifting gear attachment points, the centre of gravity and orientation e.g. keep vertical, do not throw etc.).</li> <li>• Use proper means of transport and lifting equipment that is in proper working order.</li> <li>• Always adhere to the specified transport and storage parameters.</li> <li>• Store the operating material only outside of areas exposed to direct sunlight and heat sources.</li> </ul>

**Permissible storage and transport conditions, refer to “5. Technical data” on Page 21.**

<b>NOTE</b>	<b>Handling packaging material!</b>
	Inappropriate disposal of packaging materials can cause environmental damage.
	<ul style="list-style-type: none"> <li>• The packaging material is recyclable.</li> <li>• Dispose of the packaging material in accordance with the regional laws, provisions, guidelines and regulations of the country and place of use.</li> </ul>

<b>NOTE</b>	<b>Note for transport and storage!</b>
	<p>The operating material must be</p> <ul style="list-style-type: none"> <li>• stored in the original packaging and retained in a dry as well as frost-free room. The ambient parameters, transport and storage parameters must never fall short of/exceed the specifications in the technical data chapter.</li> <li>• Always protect it against external weathering effects even in a packaged condition.</li> <li>• Secure the plant so that it cannot topple over or fall and protect it against vibration at the storage location.</li> </ul>

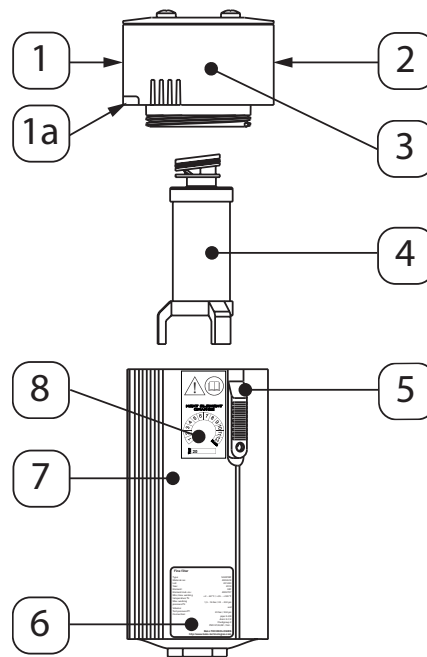
## 4. Product information

### 4.1 Product description

CLEARPOINT® activated carbon filters are designed for the separation of oil vapours and odours in compressed gas systems.

### 4.2 Product overview

The filter is made up of the following components:



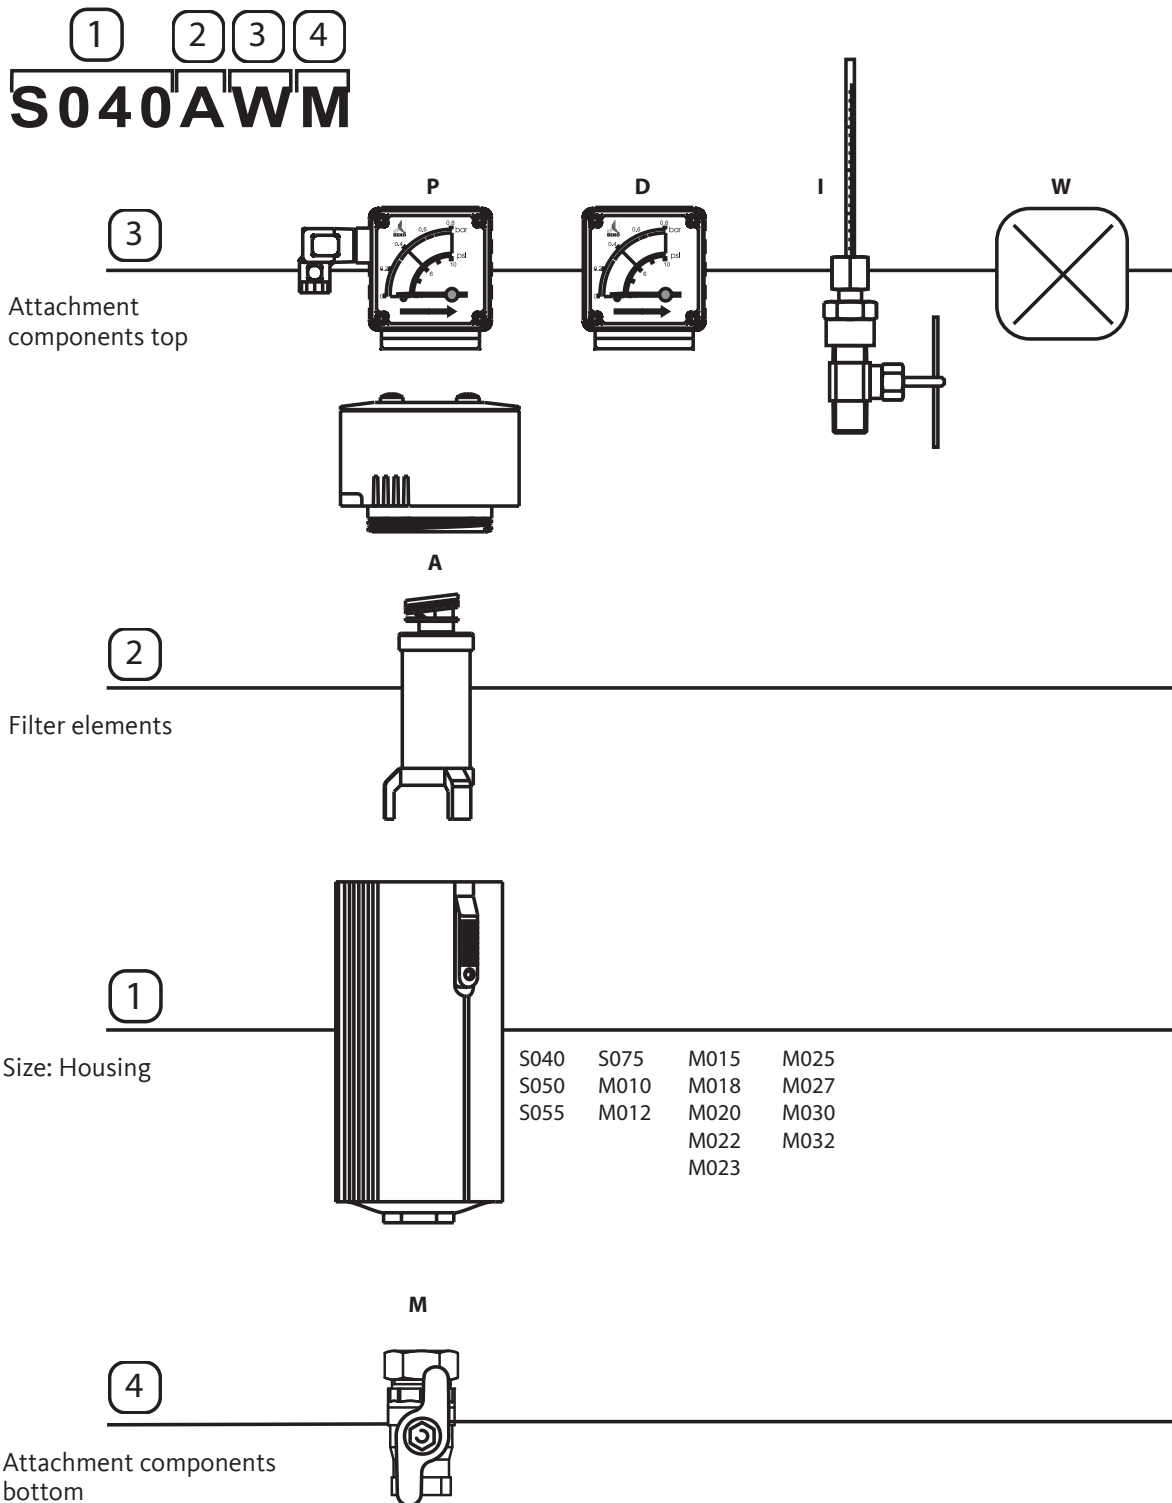
Position no.	Explanation/description
[1]	Inlet at the filter head, additionally marked 1a
[2]	Outlet at the filter head
[3]	Filter head
[4]	Filter element
[5]	Safety slide with locking screw
[6]	Type plate
[7]	Filter housing
[8]	Maintenance sticker for filter element replacement

### 4.3 Product identification

The product designation is shown on the type plate and made up of numbers and letter codes. Each code stands for a filter component and is divided into the following categories:

- [1] = Size: Housing
- [2] = Filter elements
- [3] = Attachment components top
- [4] = Attachment components bottom

The product designation is explained below using the example “S040AWM”:



Attachment components top		
Position no.	Letter code	Designation
<b>[3]</b>	P	Differential pressure gauge with potential-free contact
	D	Differential pressure gauge without potential-free contact
	I	Oil indicator
	W	Without indicator unit

Position no.	Housing size	Filter element
<b>[2]</b>	S040	04A
	S050	05A
	S055	06A
	S075	07A
	M010	10A
	M012	12A
	M015	15A
	M018	18A
	M020	20A
	M022	22A
	M023	23A
	M025	25A
	M027	27A
	M030	30A
M032	32A	

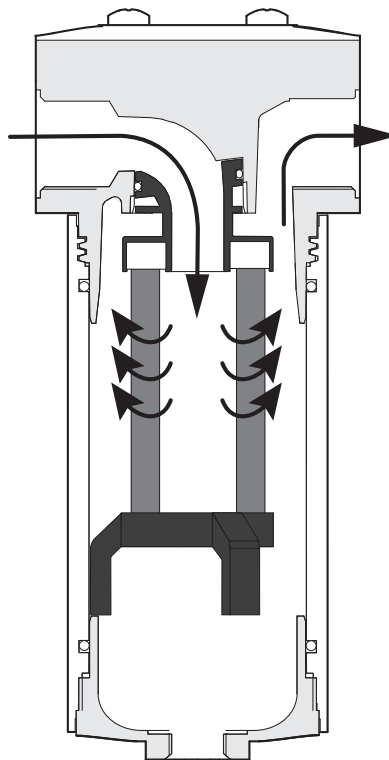
Position no.	Model series	Construction size	Designation
<b>[1]</b>	S	040	Filter housing
	S	050	
	S	055	
	S	075	
	M	010	
	M	012	
	M	015	
	M	018	
	M	020	
	M	022	
	M	023	
	M	025	
	M	027	
	M	030	
M	032		

Attachment components bottom		
Position no.	Letter code	Designation
<b>[4]</b>	M	Manual condensate drain

## 4.4 Function description

### 4.4.1 Filtration

With the CLEARPOINT® activated carbon filter, the flow through the filter element is from the inside to the outside. Compressed gas flows into the filter element from where it flows through the filter element into the filter vessel. The activated carbon contained in the filter material separates oil vapours and odours. The filter service life depends on the oil content of the compressed gas, as the filter material can only absorb a limited volume of oil vapours and odours. The particle charge or degree of pollution of the filter element can be read off using a differential pressure gauge. For further information, please refer to the installation and operating instructions enclosed with the differential pressure gauge.



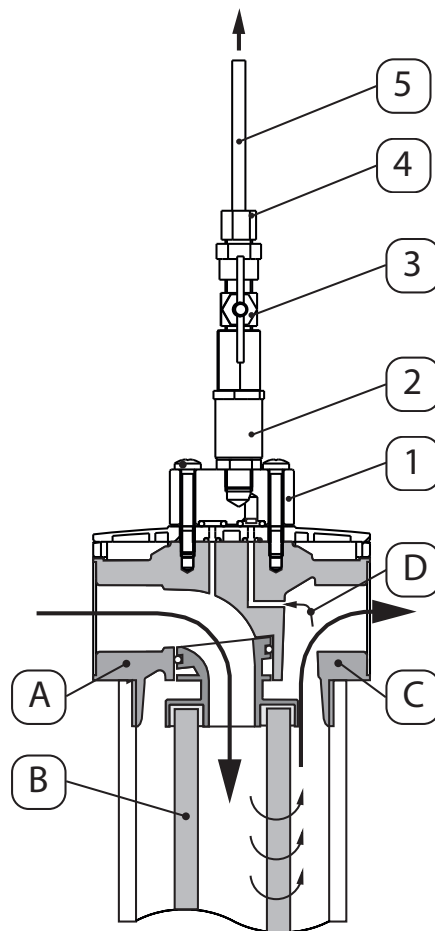


## 4.4.2 Oil indicator

An oil indicator can be fitted on the filter head **[A]** to measure and evaluate the quality of the compressed gas. For this purpose, a part **[D]** of the compressed gas flow at the filter outlet **[C]** is fed through a channel towards the testing tube **[5]** and then discharged into the environment.

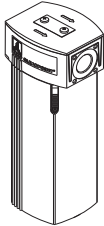
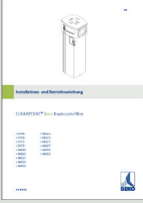
The oil indicator has a built-in pressure reducer **[2]** which reduces the operating pressure required for measurement down to 7.0 barg. For the measurement, the needle valve **[3]** must be fully open. Then a defined partial compressed gas flow of 2- 3 l/min at 7.0 barg passes through the testing tube **[5]**.


The oil contained in the compressed gas results in a progressively red discolouration of the testing tube from bottom to top **[5]**. If the testing tube has completely changed its colour, it must be replaced. For further information, please refer to the installation and operating instructions enclosed with the oil indicator.



## 4.5 Scope of delivery

The following table shows the scope of delivery of the filter.

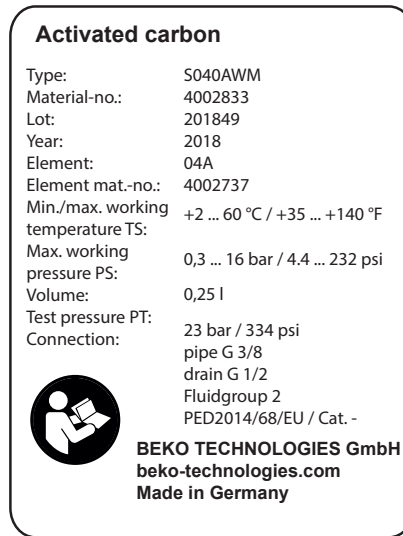
Illustration	Description/Explanation
	<p>Filter</p>
	<p>Installation and operation manual</p>

INFORMATION	Possible product combinations!
	<p>The scope of delivery can vary depending on the product combination.</p>

For further information on possible product combinations see “4.3 Product identification” on Page 14.

## 4.6 Type plate

The type plate contains the identification and operating parameters of the filter and is located on the housing. If you contact the manufacturer or supplier, always have this data ready for system identification.



Example:

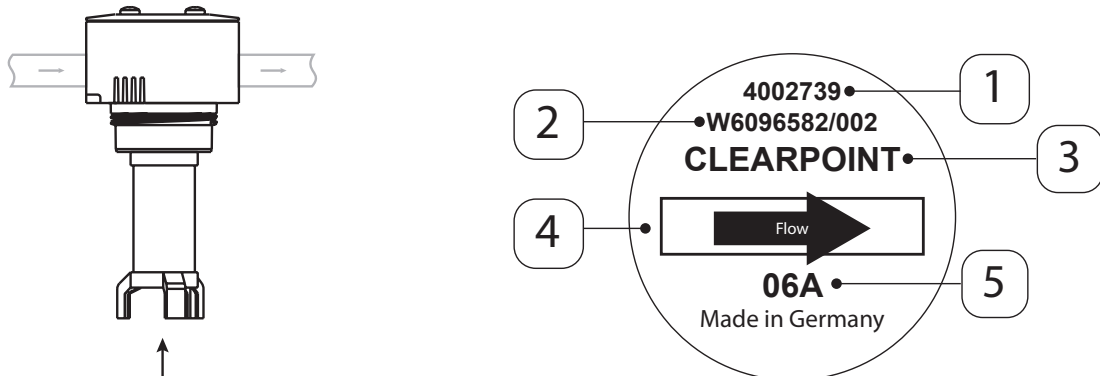
Position on type plate	Description
Activated carbon	BEKO filter designation
Model:	Sales designation
Material no.	Material number
Lot	Lot number
Year	Year of manufacturer
Element	Filter element type
Element mat-no.:	Filter element material number
Min./max. working temperature TS	Min./Max. Operating temperature range
Max.working pressure PS	Max. working pressure range
Volume	Housing volume
Test Pressure PT	Test pressure
Connection	Thread connections
pipe G 3/8	Thread connection of supply pipe
drain G 1/2	Thread connection of condensate drain
Fluidgroup 2	Fluid group according to Pressure Equipment Directive 2014/68/EU
PED2014/68/EU / Cat. -	Specification of the category according to Pressure Equipment Directive 2014/68/EU

NOTE	Handling the type plate!
	Never damage, remove or make the type plate illegible.

For more information regarding the symbols printed on the type plate, see “1.4 Explanation of the symbols and pictograms utilised” on Page 5.

### 4.7 Filter element sticker

The filter element can be identified on the basis of a sticker on the base of the filter element.



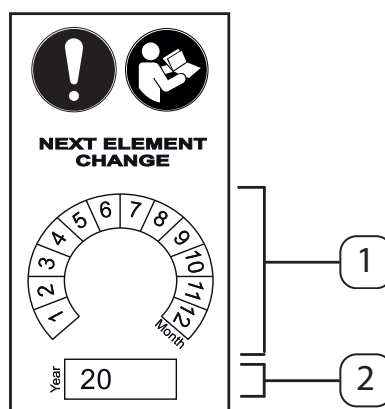
Sticker on the base of the filter element

Filter element sticker  
View filter element base

Position no.	Explanation/description
[1]	Order number
[2]	Lot number
[3]	Product group
[4]	Direction of flow
[5]	06A Designation of the filter element

### 4.8 Maintenance label for filter element replacement

The next due filter element replacement date is entered on this adhesive label. For this, mark the respective month [1] and enter the year accordingly [2].



Position no.	Explanation/description
[1]	Specification of month for next filter element replacement
[2]	Specification of year for next filter element replacement

## 5. Technical data

### 5.1 Filter performance data

CLEARPOINT®	S040	S050	S055	S075	M010	M012	M015
Connection [inches]	3/8	1/2	1/2	3/4	1	1	1 1/2
Volume flow at 7 bar(g) energy-optimised [m <sup>3</sup> /h] <sup>*1</sup>	35	65	100	150	200	250	320
Volume flow at 7 bar(g) performance-oriented [m <sup>3</sup> /h] <sup>*1</sup>	46	85	130	195	260	325	415
Category according to PED 2014/68/EU	-	-	-	-	-	-	-
Min./Max. Operating pressure [barg]	0.3 ... 16						
Min./Max. Operating temperature [°C]	+2 ... +60						
Load test according to AD2000	10000 load changes $\Delta$ pressure difference $\geq$ 3.2 bar at 16 bar(g)						
Medium	Compressed gases of fluid group 2 according to PED 2014/68/EU free of aggressive and corrosive components						
Weight [kg]	0.75	0.85	1.2	1.7	2.1	2.2	4.1
Volume [l]	0.25	0.31	0.42	0.87	1.12	1.26	2.52

<sup>\*1</sup> Volume flow at 7 bar(g) referring to +20 °C and 1 bar(abs)

CLEARPOINT®	M018	M020	M022	M023	M025	M027	M030	M032
Connection [inches]	1 1/2	2	2	2	2 1/2	2 1/2	3	3
Volume flow at 7 bar(g) energy-optimised [m <sup>3</sup> /h] <sup>*1</sup>	420	600	780	1020	1300	1620	1940	2400
Volume flow at 7 bar(g) performance-oriented [m <sup>3</sup> /h] <sup>*1</sup>	545	780	1015	1325	1690	2100	2520	3120
Category according to PED 2014/68/EU	-	I	I	I	II	II	II	II
Min./Max. Operating pressure [barg]	0.3 ... 16							
Min./Max. Operating temperature [°C]	+2 ... +60							
Load test according to AD2000	10000 load changes $\Delta$ pressure difference $\geq$ 3.2 bar at 16 bar(g)							
Medium	Compressed gases of fluid group 2 according to PED 2014/68/EU free of aggressive and corrosive components							
Weight [kg]	4.5	5.1	6.1	7.1	19.9	22.6	25.9	29.9
Volume [l]	2.97	3.40	4.23	5.24	13.9	16.5	19.5	23.2

<sup>\*1</sup> Volume flow at 7 bar(g) referring to +20 °C and 1 bar(abs)

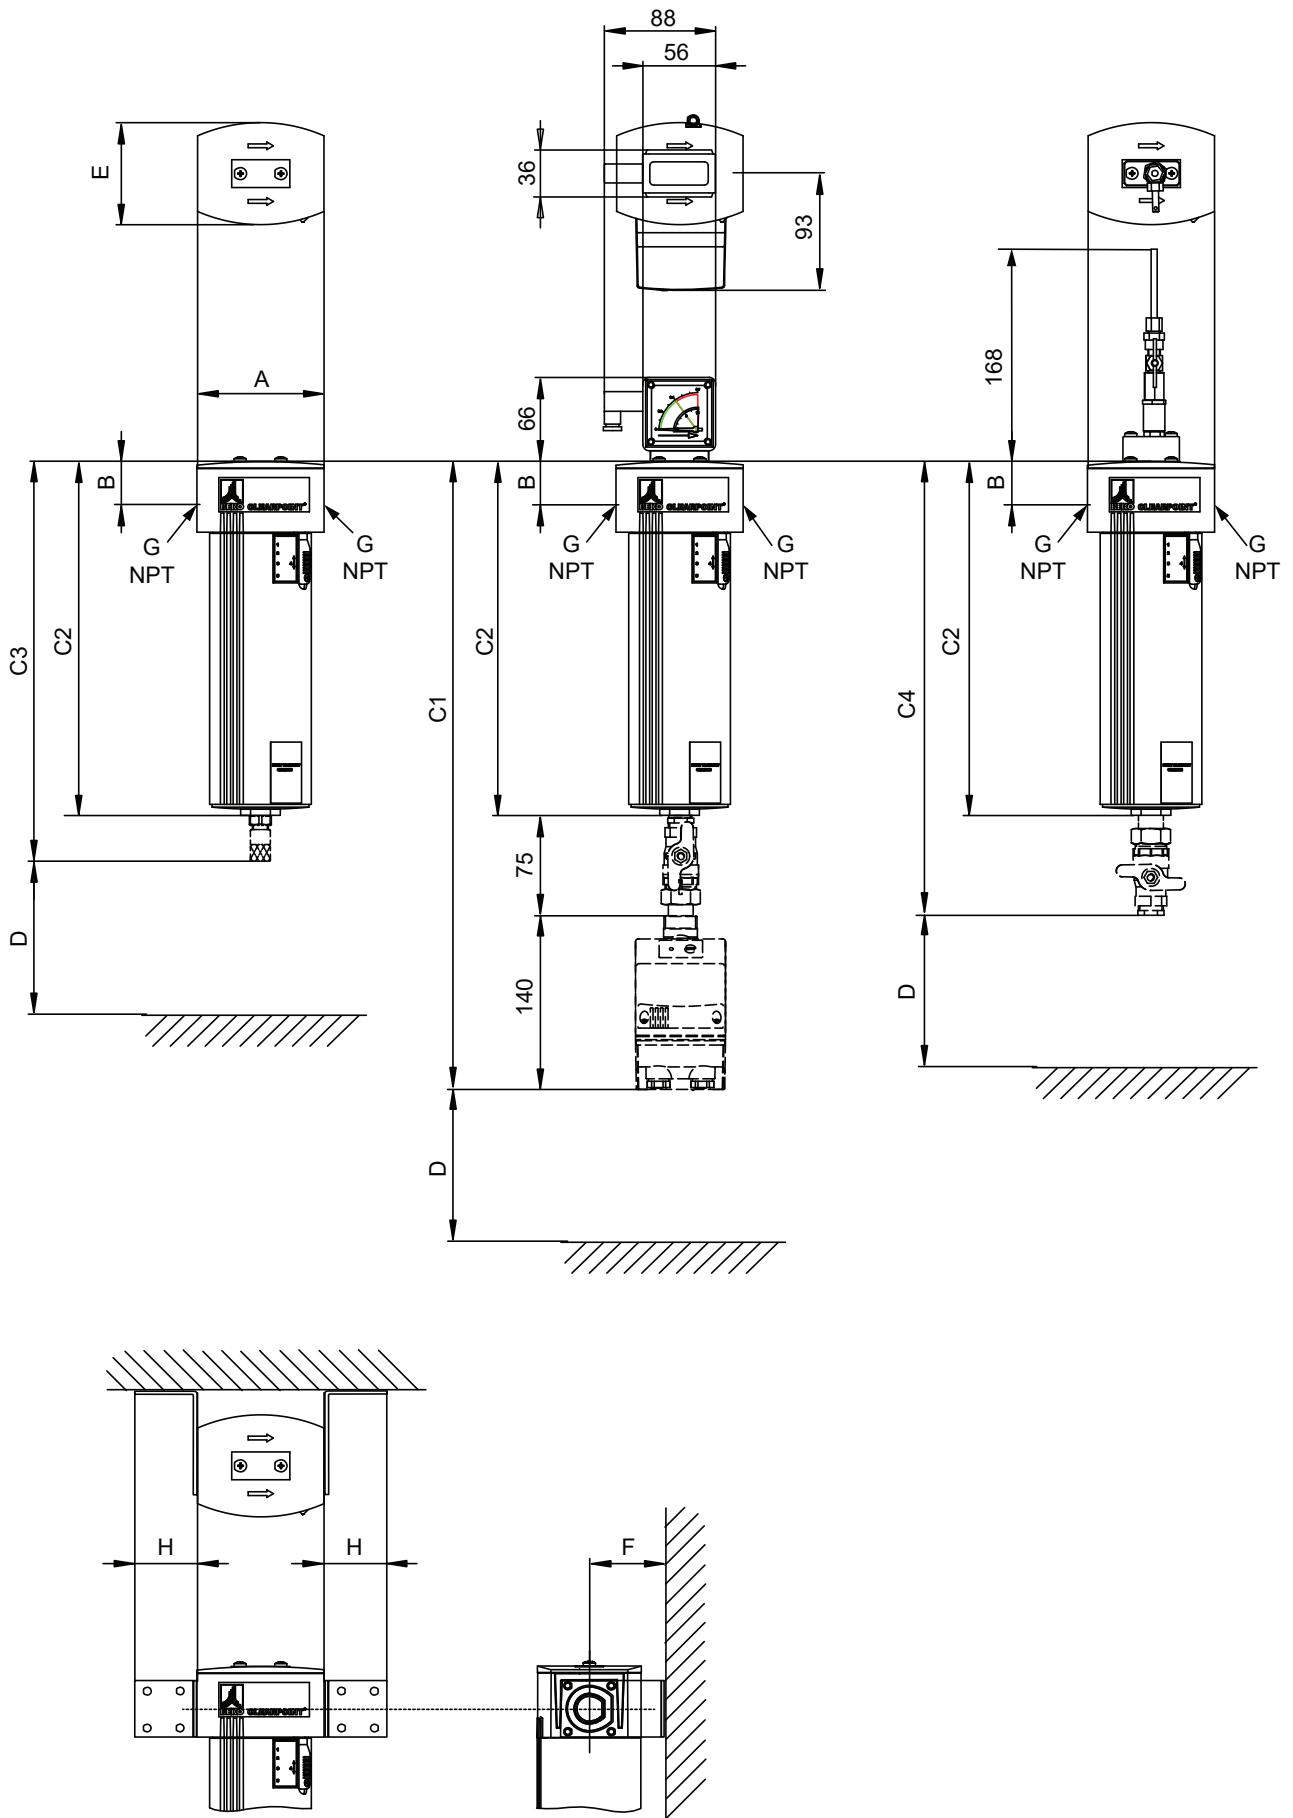
## 5.2 Filter element performance data

The activated carbon filter elements have been validated according to ISO 12500-2. Empirical data show that a residual oil discharge value of class 1 according to ISO 8573-1 can be achieved with prior compressed gas filtration and drying.

## 5.3 Materials

Component	Material
Housing head (filter head)	S040 ... M012: Aluminium (die-cast), anodised, powder-coated M015 ... M032: Aluminium (sand casting), anodised, powder-coated
Housing body	S040 ... M032: Aluminium (extruded profile), anodised, powder-coated
Housing cover	Polyamide PA6, 30 % glass fibre reinforced
Housing base	S040 ... M012: Aluminium (die-cast), anodised, powder-coated M015 ... M032: Aluminium (sand casting), anodised, powder-coated
M5 screws	Steel, black galvanised
Slide	Zinc (die-cast), seal FKM
O-rings	Standard: NBR   oil-free: FKM
Manual condensate drain	Brass, nickel-plated
Wall bracket	Stainless steel
Adhesive label	Soft PVC, polyacrylate adhesive
Differential pressure gauge	See the installation and operating manual for the differential pressure gauge
Oil indicator	See the installation and operating manual for the oil indicator
Filter element	Element head and base = Polyamide PA6, 30 % glass content Support body inside / outside = Expanded stainless steel Non-woven filter material = Borosilicate fibres Support material for pleats = Polypropylene Drainage material = Polyester needle felt Sealing compound = Polyurethane O-rings = Standard: NBR   oil-free: FKM

## 6. Dimensions







Filter	Connection thread	A	B	C1	C2	C3	C4	D	E	F	H	Filter element
	G / NPT [inches]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]	
S040 (type)	3/8	75	28	395	180	208	243	150	60	64.5	39.5	04A
S050 (type)	1/2	75	28	425	210	238	273	150	60	64.5	39.5	05A
S055 (type)	1/2	75	28	480	265	293	328	150	60	64.5	39.5	06A
S075 (type)	3/4	100	34	495	280	308	343	150	80	63	45	07A
M010 (type)	1	100	34	565	350	378	413	150	80	63	45	10A
M012 (type)	1	100	34	600	385	413	448	150	80	63	45	12A
M015 (type)	1 1/2	146	48	580	365	384	428	200	120	78.5	60	15A
M018 (type)	1 1/2	146	48	633	418	437	481	200	120	78.5	60	18A
M020 (type)	2	146	48	683	468	487	531	200	120	78.5	60	20A
M022 (type)	2	146	48	780	565	584	628	200	120	78.5	60	22A
M023 (type)	2	146	48	898	683	702	746	300	120	78.5	60	23A
M025 (type)	2 1/2	260	77	886	671	684	734	300	200	130	120	25A
M027 (type)	2 1/2	260	77	990	775	788	838	300	200	130	120	27A
M030 (type)	3	260	77	1010	895	908	958	300	200	130	120	30A
M032 (type)	3	260	77	1260	1045	1058	1108	300	200	130	120	32A



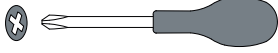
## 7. Assembly

### 7.1 Warning notices

<b>DANGER</b>	<b>Use of incorrect spare parts, accessories or installation materials!</b>
	The use of incorrect spare parts, accessories or installation materials, as well as auxiliary and operating materials, may result in death or serious injury. In addition, malfunction and device failure or material damage can occur.
	<ul style="list-style-type: none"> <li>• For all installation, servicing and maintenance work, only use undamaged original parts, auxiliary and operating materials which are specified by the manufacturer.</li> <li>• Only use fittings and connecting elements approved for the respective application as well as suitable tools in perfect operating condition.</li> <li>• Only use pipes that are free of dirt, damage and corrosion.</li> </ul>
<b>DANGER</b>	<b>Pressurised system!</b>
	Death or serious personal injury can result through contact with fast or suddenly escaping compressed air or through bursting system parts
	<ul style="list-style-type: none"> <li>• All work on the system must be carried out in the depressurised state and with the system secured against unintentional pressure build-up.</li> <li>• Set up a safety zone around the system during all assembly, installation, maintenance and repair work.</li> <li>• Before applying pressure to the system, check all pipe connections and tighten if necessary.</li> <li>• Slowly pressurise the system with compressed gas.</li> <li>• Avoid pressure blows and high differential pressures.</li> <li>• Assemble all pipes without mechanical stress. Avoid any vibrations occurring in the pipe network by using vibration dampers.</li> <li>• The pipes must be able to bear the additional weight of the filter. Additional fixings must be mounted if necessary.</li> <li>• Always keep exactly to the installation and operating instructions given in this manual.</li> <li>• Always keep inspection and maintenance interval exactly.</li> <li>• Install fixed pipes as supply and discharge drains.</li> <li>• Do not carry out any structural changes to the product.</li> </ul>
<b>WARNING</b>	<b>Insufficient qualification!</b>
	Insufficient qualification of the personnel can lead to accidents, personal injury and damage to the device as well as impairments during work on the operating material.
	All work on the product may only be carried out by appropriately qualified skilled personnel.
<b>CAUTION</b>	<b>Inappropriate assembly!</b>
	Inappropriate assembly of the product can lead to personal injury and product damage as well as impair operation.
	<ul style="list-style-type: none"> <li>• The direction of flow of the filter must match the direction of flow in the pipe.</li> <li>• The filter must be fitted vertically in the pipe.</li> </ul>

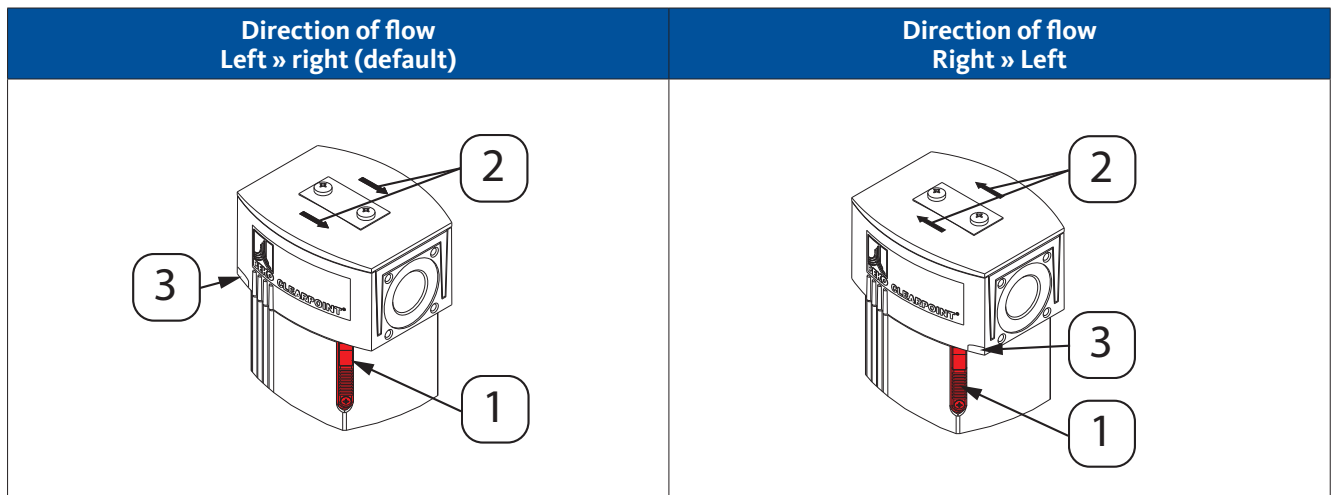
## 7.2 Assembly work

For assembly work to be carried out, the following prerequisites must be fulfilled and the preparatory tasks must have been completed.

Prerequisites		
Tools	Material	Protective equipment
<ul style="list-style-type: none"> <li>Screwdriver - cross-head size 2.5 mm</li> </ul> 	<ul style="list-style-type: none"> <li>Additional installation and operating manual for the accessories used</li> <li>Sealing materials such as e.g. PTFE tape (EN 837-2)</li> </ul>	<ul style="list-style-type: none"> <li>Protective gloves (fluid-resistant)</li> <li>Safety goggles with side shields</li> <li>Hearing protection</li> <li>Respiratory protection, protection class FFP 3</li> <li>Safety footwear</li> </ul>

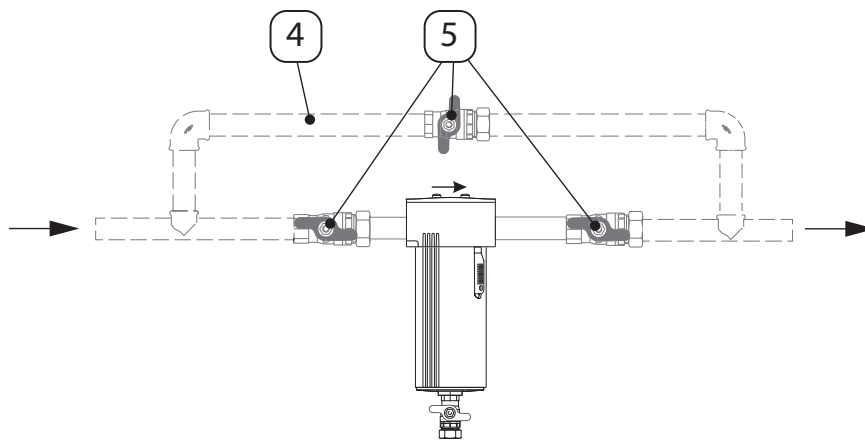
Preparation of installation	
1.	Remove the dust cap from the following threads: <ul style="list-style-type: none"> <li>Inlet and outlet on the filter head</li> <li>Condensate drain on the filter base</li> </ul>
2.	Depressurise the pipelines or relevant pipe section.
3.	Heed the filter dimensions and make sure there is sufficient space for assembly. See "6. Dimensions" on Page 23.
4.	Pipes must be able to bear the additional weight of the filter. Additional fixings must be mounted if necessary.
5.	Pipes must be free of contamination and corrosion. Check pipe thread for damage. Defective pipes must be replaced immediately.
6.	Pipes must be free of mechanical stress and corrosion. Compensate any vibrations which occur by using vibration dampers.
7.	Only use fittings which are suitable for this pressure and temperature range. The pipe threads must match those of the filter head.
8.	In some cases it may be necessary to design the condensate drain in such a way that no compressed gas or condensate can escape to the surrounding of the filter. The condensate to be discharged should be routed to a processing system conforming to law (e.g. ÖWAMAT® or BEKOSPLIT®).

The direction of flow of the filter must be taken into account during assembly. It must be adapted to the direction of flow in the pipe.



The housing head and the housing body are equipped with a double-start trapezoidal thread. The direction of flow of the filter can be adapted to the direction in the pipe by turning the housing head through 180°. The direction of flow is indicated by arrows [2] and a raised marking [3] on the housing head. These must be aligned as shown. The safety slide [1] must always be in an easily accessible position on the front.

The fitting of a bypass pipe [4] and corresponding shut-off valves [5] is recommended for maintenance and servicing work.



1. Apply sealing material e.g. PTFE-tape (EN 837-2) to the pipe ends
2. Screw the pipe thread into the filter inlet until the connection is firm and leak-tight
3. Screw the pipe thread into the filter outlet until the connection is firm and leak-tight

After assembly work has been finished, it must be checked whether the housing body has been screwed in properly, the safety slide pushed up and the safety screw tightened hand-tight. A leakage test should be carried out to check the assembly work. For additional information, refer to "9.6 Leakage test" on Page 34.

## 8. Commissioning

### 8.1 Commissioning tasks

For commissioning to be carried out, the following prerequisites must be fulfilled and the preparatory tasks must have been completed.

Prerequisites		
Tools	Material	Protective equipment
<ul style="list-style-type: none"> <li>None</li> </ul>	<ul style="list-style-type: none"> <li>none</li> </ul>	<ul style="list-style-type: none"> <li>None</li> </ul>

Preparation of installation	
1.	Assembly finished including subsequent leakage test

Illustration	Description
	<ol style="list-style-type: none"> <li>1. Open the shut-off valve <b>[1]</b> on the inlet side <b>slowly</b></li> <li>2. Open the shut-off valve <b>[2]</b> on the outlet side <b>slowly</b></li> <li>3. Close the shut-off valve <b>[3]</b> of the bypass pipe</li> </ol>



## 9. Maintenance and servicing

### 9.1 Maintenance schedule

Maintenance	Interval
Cleaning work	At regular intervals, depending on the degree of contamination
Visual inspection	Weekly
Replacement of the testing tube	In case discolouration is complete
Replace the filter element	Approx. 2000 operating hours, for details see 9.5 on Page 31
Leakage test	Recommended interval: At the end of all assembly work and maintenance and servicing work on the product

### 9.2 Cleaning

#### 9.2.1 Warning notices

<b>CAUTION</b>	<b>Inappropriate cleaning and use of the wrong cleaning media!</b>
	<p>Inappropriate cleaning and the use of the wrong cleaning media may result in minor injuries as well as damage to health and property.</p> <ul style="list-style-type: none"> <li>• Never clean the device with a wet cloth.</li> <li>• Never use abrasive or aggressive cleaning agents or solvents which could damage the outer coating (e.g. markings, type plate, corrosion protection, etc.).</li> <li>• Never clean the device with hard or pointed implements.</li> <li>• For external cleaning, use a dust brush or damp cotton cloths that cannot become statically charged.</li> <li>• Immediately replace operating material labels (pictograms, markings) that have become illegible.</li> </ul>
<b>NOTE</b>	<b>Local hygiene regulations!</b>
	In addition to the cleaning instructions listed, any local hygiene regulations which are in place must be heeded.

## 9.2.2 Cleaning work

For cleaning to be carried out, the following prerequisites must be fulfilled and the preparatory tasks must have been completed.

Prerequisites		
Tools	Material	Protective equipment
<ul style="list-style-type: none"> <li>None</li> </ul>	<ul style="list-style-type: none"> <li>Mild detergent</li> <li>Cotton cloth or disposable tissue</li> </ul>	<ul style="list-style-type: none"> <li>Protective gloves (fluid-resistant)</li> <li>Safety goggles with side shields</li> <li>Hearing protection</li> <li>Respiratory protection, protection class FFP 3</li> <li>Safety footwear</li> </ul>

To clean the filter, use a damp (but not wet) cotton cloth or disposable tissue and a mild conventional detergent or soap.

1. Spray a little detergent onto the clean cotton cloth or disposable tissue.
2. Wipe down the entire surface of the component.
3. The final drying is accomplished with a clean cloth or through air drying.

## 9.3 Visual inspection

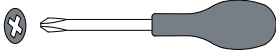
During the visual inspection of the filter, all components must be inspected for mechanical damage and corrosion. Any damaged components must be replaced immediately.

## 9.4 Replacement of the testing tube

For further information on the replacement of the testing tube on the oil indicator, please refer to the installation and operating instructions supplied with the oil indicator.

## 9.5 Replacement of the filter element

For filter element replacement to be carried out, the following prerequisites must be fulfilled and the preparatory tasks must have been completed.

Prerequisites		
Tools	Material	Protective equipment
<ul style="list-style-type: none"> <li>Screwdriver - cross-head size 2.5 mm</li> </ul> 	<ul style="list-style-type: none"> <li>New filter element</li> </ul>	<ul style="list-style-type: none"> <li>Protective gloves (fluid-resistant)</li> <li>Safety goggles with side shields</li> <li>Hearing protection</li> <li>Respiratory protection, protection class FFP 3</li> <li>Safety footwear</li> </ul>

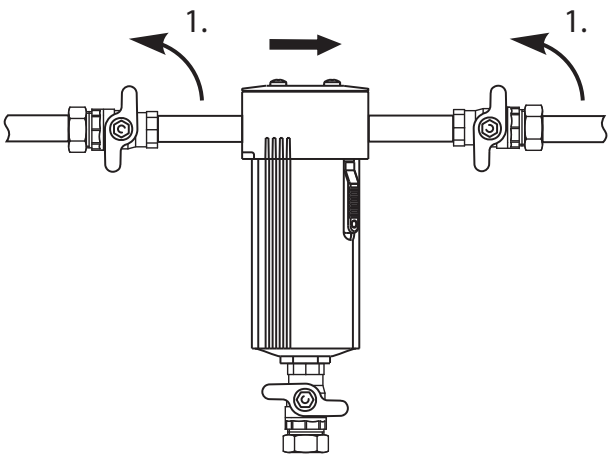
Preparation of installation	
1.	Open the bypass pipe if available

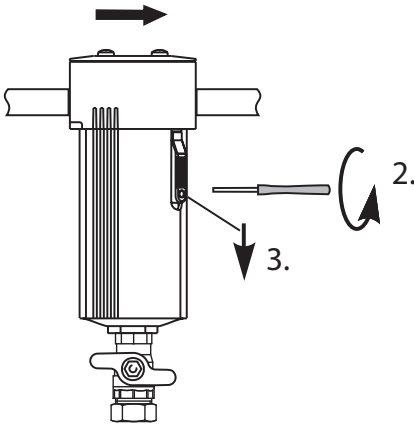
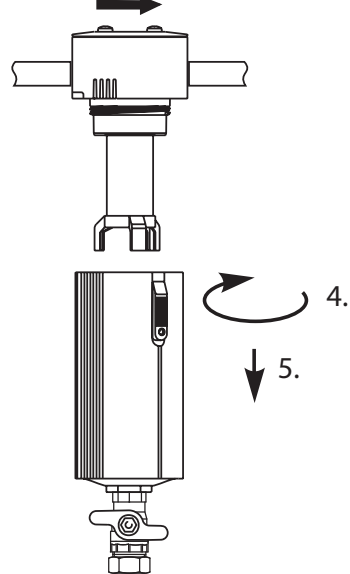
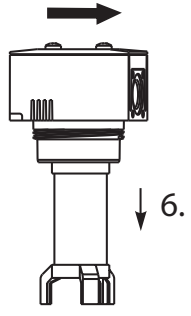
The service life of the activated carbon filter element depends on several factors:

- Portion (approx. 15%) and absorption capacity of the activated carbon in the filter element (<15%)
- Compressed air temperature (reference +20 °C) and real portion of oil vapour and if applicable aerosols (reference 0.01 mg/m³)
- Compressed air dryness (reference: max. 30 % relative humidity)

Under these reference conditions it is possible to achieve a service life of approx. 2000 operating hours.

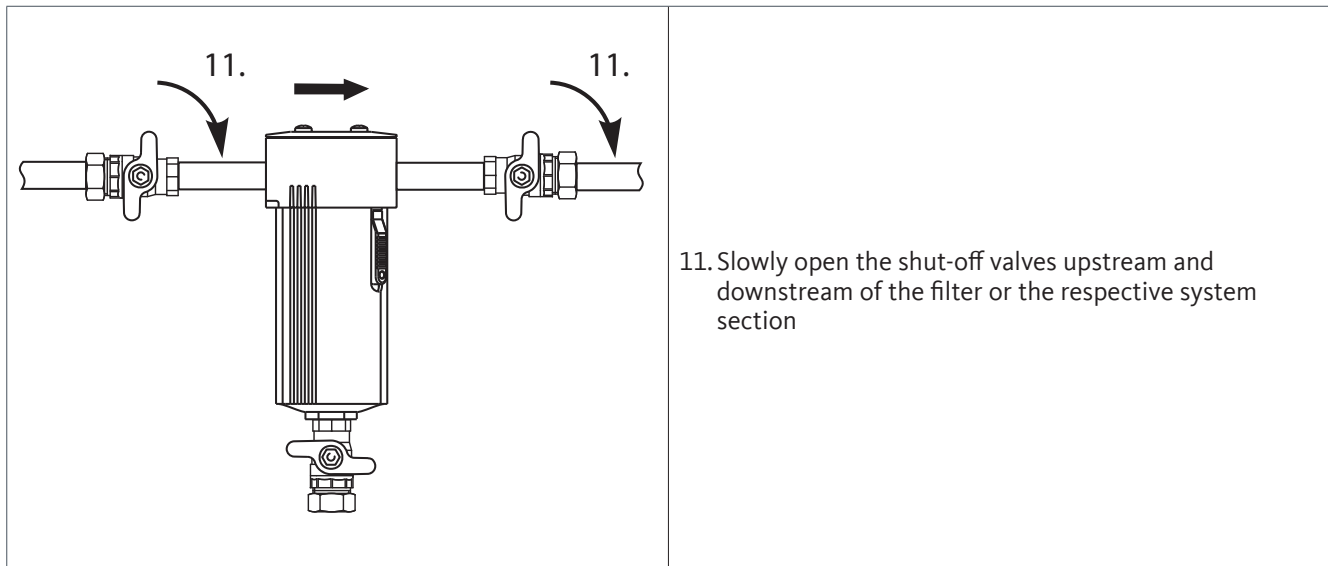
The hydrocarbons contained in the compressed air are not completely absorbed by the activated carbon: The absorption capacity for hydrocarbons not only depends on the properties of the activated carbon (raw materials, grain size, pore size, ...) but above all on the molecular structure and polarity of the gas fractions to be absorbed.

Illustration	Description
	<ol style="list-style-type: none"> <li>1. Close the shut-off valves upstream and downstream of the filter or the respective system section and depressurise the filter</li> </ol>

	<p>2. Undo the locking screw on the safety slide 3. Push the safety slide downwards</p>
	<p>4. Unscrew the housing body 5. Pull the housing body down and off</p>
	<p>6. Pull the used filter element down and out of the housing head</p>



	<p>7. Insert a new filter element in the housing head The direction of flow indicated on the housing head and the filter element base must match</p>
	<p>8. Screw the housing body to the housing head <b>Make sure that the safety slide is facing the front.</b></p>
	<p>9. Push the safety slide upwards 10. Tighten the locking screw on the safety slide</p>

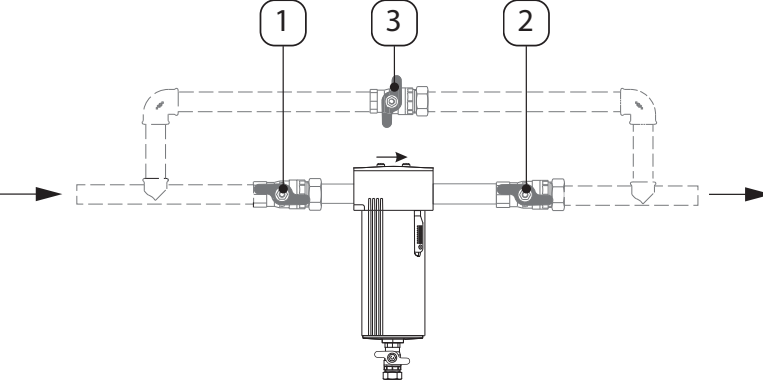


11. Slowly open the shut-off valves upstream and downstream of the filter or the respective system section

## 9.6 Leakage test




The leakage test is a non-destructive test method and is used to prove leak tightness in vacuum and overpressure systems. The leakage test can be carried out in different ways. **BEKO TECHNOLOGIES GMBH** does not make a specific recommendation here. The company operating the compressed gas system is responsible for the selection and specification of the test method to be used, which should be carried out in accordance with valid standards and regulations (e.g. DIN EN 1779).

## 10. Decommissioning

Illustration	Description
	<ol style="list-style-type: none"><li>1. Open the shut-off valve <b>[3]</b> of the bypass pipe (if available)</li><li>2. Close the shut-off valve <b>[2]</b> on the outlet side</li><li>3. Close the shut-off valve <b>[1]</b> on the inlet side</li></ol>

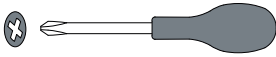
# 11. Disassembly

## 11.1 Warning notices

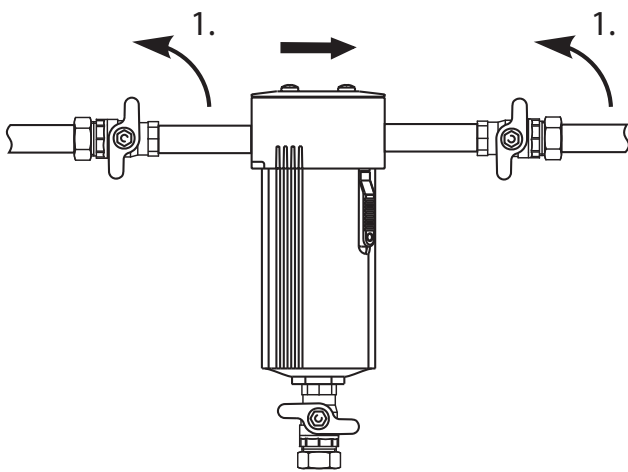
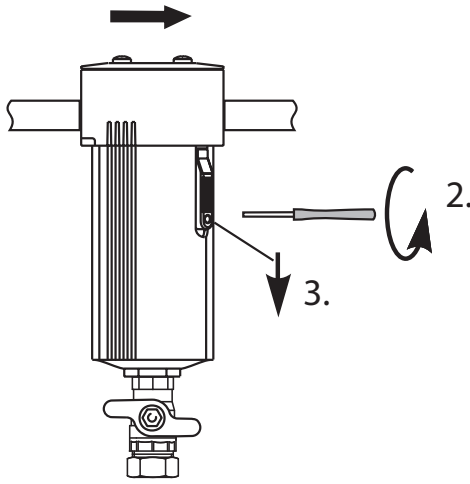
<b>DANGER</b>	<b>Use of incorrect accessories, materials or spare parts!</b>
	<p>The use of incorrect spare parts, accessories or installation materials, as well as auxiliary and operating materials, may result in death or serious injury. In addition, malfunction and device failure or material damage can occur.</p>
	<ul style="list-style-type: none"> <li>• For all disassembly work, only use undamaged original parts, auxiliary and operating materials which are specified by the manufacturer.</li> <li>• Only use fittings and connecting elements approved for the respective application as well as suitable tools in perfect operating condition.</li> </ul>
<b>DANGER</b>	<b>Compressed gas</b>
	<p>Death or serious personal injury can result through contact with fast or suddenly escaping compressed air or through bursting system parts</p>
	<ul style="list-style-type: none"> <li>• All work on the system must be carried out in the depressurised state and with the system secured against unintentional pressure build-up.</li> <li>• Set up a safety zone around the system during all assembly, installation, maintenance and repair work.</li> <li>• Before applying pressure to the system, check all pipe connections and tighten if necessary.</li> <li>• Slowly pressurise the system with compressed gas.</li> <li>• Avoid pressure blows and high differential pressures.</li> <li>• Assemble all pipes without mechanical stress. Avoid any vibrations occurring in the pipe network by using vibration dampers.</li> <li>• Always keep exactly to the installation and operating instructions given in this manual.</li> <li>• Always keep inspection and maintenance interval exactly.</li> <li>• Install fixed pipes as supply and discharge drains.</li> <li>• Do not carry out any structural changes to the product.</li> </ul>
<b>WARNING</b>	<b>Insufficient qualification!</b>
	<p>Insufficient qualification of the personnel can lead to accidents, personal injury and damage to the device as well as impairments during work on the operating material.</p>
	<p>The work on the product described below may only be executed and documented by qualified personnel for compressed gas technology.</p>

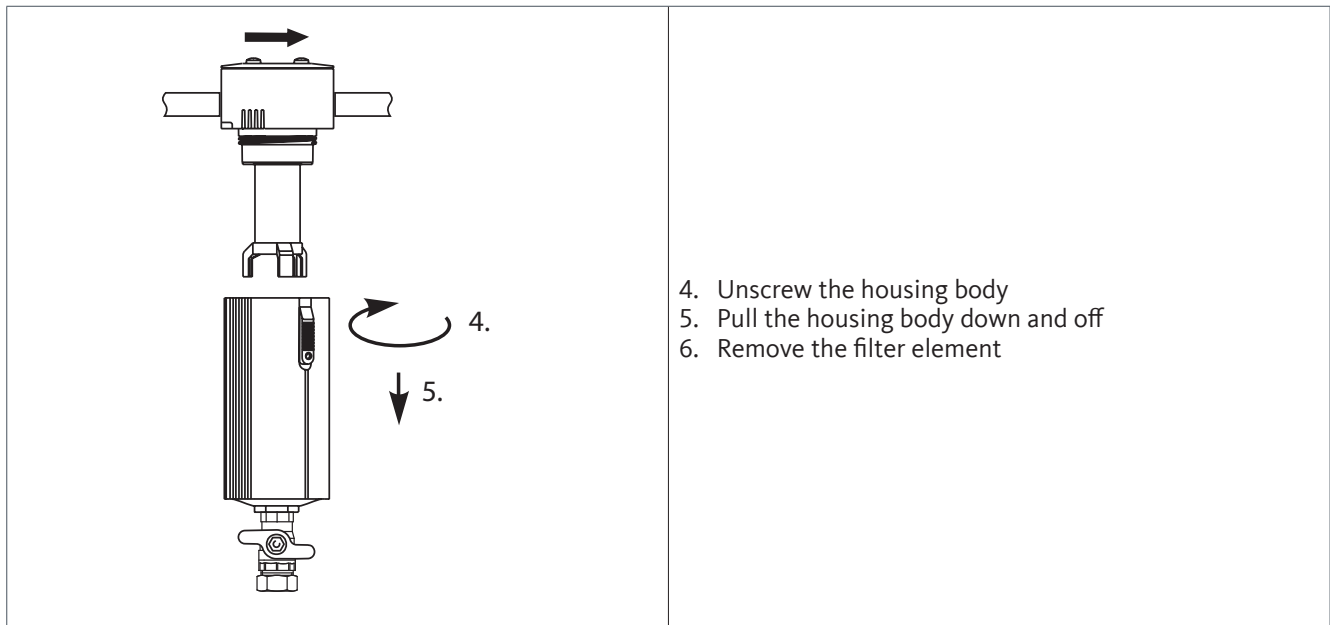
## 11.2 Disassembly work

For disassembly to be carried out, the following prerequisites must be fulfilled and the preparatory tasks must have been completed.

Prerequisites		
Tools	Material	Protective equipment
<ul style="list-style-type: none"> <li>Screwdriver - cross-head size 2.5 mm</li> </ul> 	<ul style="list-style-type: none"> <li>none</li> </ul>	<ul style="list-style-type: none"> <li>Protective gloves (fluid-resistant)</li> <li>Safety goggles with side shields</li> <li>Hearing protection</li> <li>Respiratory protection, protection class FFP 3</li> <li>Safety footwear</li> </ul>

Preparation of installation	
1.	Open the bypass pipe if available



Illustration	Description
	<p>1. Close the shut-off valves upstream and downstream of the filter or the respective system section, depressurise the filter and secure the system against unintentional application of pressure</p>
	<p>2. Undo the locking screw on the safety slide 3. Push the safety slide downwards</p>



7. Remove the filter head from the pipe and seal the ends of the pipe properly
8. Dispose of the components properly

## 12. Disposal

### 12.1 Warning notices

<b>DANGER</b>	<b>Use of incorrect accessories, materials or spare parts!</b>
	<p>The use of incorrect spare parts, accessories or installation materials, as well as auxiliary and operating materials, may result in death or serious injury. In addition, malfunction and device failure or material damage can occur.</p>
	<ul style="list-style-type: none"> <li>• For all disassembly work, only use undamaged original parts, auxiliary and operating materials which are specified by the manufacturer.</li> <li>• Only use fittings and connecting elements approved for the respective application as well as suitable tools in perfect operating condition.</li> </ul>
<b>NOTE</b>	<b>Inappropriate disposal!</b>
	<p>Inappropriate disposal of parts and components, operating and auxiliary materials as well as cleaning media can cause environmental damage.</p>
	<ul style="list-style-type: none"> <li>• Dispose of all parts and components, operating and auxiliary materials as well as cleaning media professionally and in accordance with regional legal provisions, regulations and requirements.</li> <li>• In case of uncertainties regarding disposal, always consult a regional waste management company.</li> </ul>

### 12.2 Disposal work

At the end of its useful life, the product must be disposed of properly e.g. by a specialist company. Materials as glass, plastics and some chemical compounds are mostly recoverable, reusable, or recyclable.

All national and local regulations must be kept during disposal.

#### **Used activated carbon filter element:**

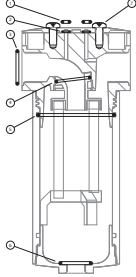
Compliance with the waste hierarchy according to Article 4 of Directive 2008/98/EC is mandatory.

#### **Used float drain:**

Do not dispose of as household waste! Disposal must be carried out properly and in line with environmental requirements.

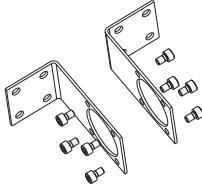

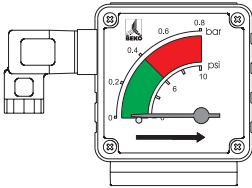
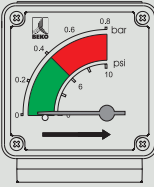
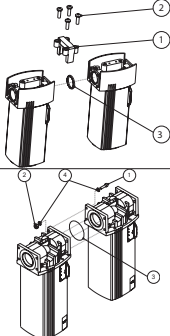
## 13. Spare parts and accessories

### 13.1 Spare parts


Designation	Illustration	Separate documentation
<p>O-ring set for S040, S050, S055 → 4026562</p> <p>O-ring set for S075, M010, M012 → 4026563</p> <p>O-ring set for M015, M018, M020, M022, M023 → 4026564</p> <p>O-ring set for M025, M027, M030, M032 → 4026565</p>		<p>Enclosed instruction leaflet</p>



### 13.2 Accessories attachment components top

Designation	Illustration	Separate documentation
Wall bracket for S040, S050, S055 → 4003328 Wall bracket for S075, M010, M012 → 4003329 Wall bracket for M015, M018, M020, M022, M023 → 4003330 Wall bracket for M025, M027, M030, M032 → 4003331		None
Oil indicator		Enclosed installation and operation manual
Differential pressure gauge with potential-free contact → 4001481		Enclosed installation and operation manual
Differential pressure gauge without potential-free contact → 4001491		Enclosed installation and operation manual
Connecting kit for S040, S050, S055 → 4003332 Connecting kit for S075, M010, M012 → 4003333 Connecting kit for M015, M018, M020, M022, M023 → 4003334 Connecting kit for M025, M027, M030, M032 → 4003335		Enclosed instruction leaflet


### 13.3 Accessories attachment components bottom

Designation	Illustration	Separate documentation
Manual condensate drain → 2000039	 A technical line drawing of a manual condensate drain. It features a vertical cylindrical body with a central handle on the right side. The handle has a circular grip with a central screw. At the top, there is a flange with a central opening. At the bottom, there is a similar flange with a central opening. The drawing is a perspective view showing the front and side of the component.	None

## 14. Fault and trouble shooting / FAQ

Error or fault pattern	Possible causes	Remedy
Poor compressed gas quality	Excessive load, load surges	<ul style="list-style-type: none"> <li>• Change operating method</li> <li>• Avoid pressure surges</li> <li>• Observe the prescribed operating parameters, particularly during start-up processes</li> </ul>
	Non-functioning condensate discharge	<ul style="list-style-type: none"> <li>• Guarantee regular condensate discharge</li> </ul>
	Incorrect dimensioning	<ul style="list-style-type: none"> <li>• Dimension the filter according to the given operating parameters and replace if necessary</li> </ul>
	Filter element installed incorrectly	<ul style="list-style-type: none"> <li>• Watch direction of flow / direction of installation of the filter element</li> </ul>
High differential pressure	O-ring has been damaged during installation	<ul style="list-style-type: none"> <li>• Procure new filter element and O-ring, proceed with care during installation</li> </ul>
	Incorrect dimensions	<ul style="list-style-type: none"> <li>• Dimension the filter according to the given operating parameters and replace by larger one if necessary</li> </ul>
	Excessive contamination	<ul style="list-style-type: none"> <li>• Shorten the maintenance interval for filter element replacement</li> <li>• Filtration in stages may be necessary</li> </ul>
Condensate in downstream components	Filter elements destroyed	<ul style="list-style-type: none"> <li>• Change in operating method</li> <li>• Filtration in stages may be necessary</li> </ul>
	Condensate drain defective or malfunctioning	<ul style="list-style-type: none"> <li>• Replace float drain or carry out maintenance on BEKOMAT®</li> </ul>
Leakage	Cooling downstream of filtration section	<ul style="list-style-type: none"> <li>• Drying upstream of filtration required</li> </ul>
	Ageing seals	<ul style="list-style-type: none"> <li>• Replace seals within the context of maintenance work</li> </ul>
	Mechanical damage	<ul style="list-style-type: none"> <li>• Send in the filter for repair or replace by a new one</li> </ul>

## 15. Product approvals and registration marks

Symbol/Pictogram	Description/Explanation
	CE marking on the filter Applicable for sizes M020, M022, M025, M027, M030 und M032

**BEKO TECHNOLOGIES GMBH**  
Im Taubental 7  
41468 Neuss

GERMANY

Tel: +49 2131 988-0  
www.beko-technologies.com



## Herstellererklärung

Wir erklären hiermit, dass die nachfolgend bezeichneten Produkte, in den von uns gelieferten Ausführungen gemäß Druckgeräterichtlinie 2014/68/EU Artikel 4 Absatz 3 in Übereinstimmung mit der geltenden guten Ingenieurpraxis ausgelegt und hergestellt werden.

Produktbezeichnung:	Behälter für Gewindefilter
Typbezeichnung:	CLEARPOINT
Baugröße:	S040, S045, S050, S055, S075, S100, M010, M012, M015, M018
Max. Betriebsdruck:	16 bar
Beschreibung der Druckgeräte:	Druckgeräte für Fluide der Gruppe 2

Druckgeräte nach Artikel 4 Absatz 3 der Druckgeräterichtlinie 2014/68/EU dürfen nicht die in Artikel 19 genannte CE-Kennzeichnung tragen.

Die Behälter wurden einer hydraulischen Druckprüfung mit 23 bar, und einer Dichtheitsprüfung mit dem Medium Druckluft, bei 7,0 bar unterzogen. Bei den durchgeführten Prüfungen zeigten sich keine Mängel.

Neuss, 30.07.2019

**BEKO TECHNOLOGIES GMBH**

i.V. Christian Riedel  
Leiter Qualitätsmanagement International

**BEKO TECHNOLOGIES GMBH**  
Im Taubental 7  
41468 Neuss

GERMANY

Phone: +49 2131 988-0  
ww.beko-technologies.com



## Manufacturer Declaration

We hereby declare that the products indicated hereafter, in the condition in which they have been placed into circulation, have been designed and manufactured according to sound engineering practice, in compliance with Article 4, Paragraph 3 of the European Pressure Equipment Directive 2014/68/EC.

Product designation:	Vessel for threaded filter
Model designation:	CLEARPOINT
Construction size:	S040, S045, S050, S055, S075, S100, M010, M012, M015, M018
Max. operating pressure:	16 bar
Description of the pressure equipment:	Pressure equipment for fluids of Group 2

Pressure equipment according to Article 4, Paragraph 3 of the European Pressure Equipment Directive 2014/68/EC must not bear the CE marking referred to in Article 19 of the above Directive.

The vessel was subjected to a hydraulic pressure test with 23 bar and a leakage test with a compressed air media at 7.0 bar. The vessel passed both tests successfully and no defects were detected.

Neuss, 30.07.2019

**BEKO TECHNOLOGIES GMBH**

i.V. Christian Riedel  
Head of International Quality Management

**BEKO TECHNOLOGIES GMBH**  
 Im Taubental 7  
 41468 Neuss

GERMANY

Tel: +49 2131 988-0  
 www.beko-technologies.com



## EU-Konformitätserklärung

Wir erklären hiermit, dass die nachfolgend bezeichneten Produkte den Anforderungen der einschlägigen Richtlinien und technischen Normen entsprechen. Diese Erklärung bezieht sich nur auf die Produkte in dem Zustand, in dem sie von uns in Verkehr gebracht wurden. Nicht vom Hersteller angebrachte Teile und/oder nachträglich vorgenommene Eingriffe bleiben unberücksichtigt.

Produktbezeichnung:	Behälter für Gewindefilter CLEARPOINT® ...
Modelle:	M020, M022, M023
Max. Betriebsdruck:	16 bar (g)
Produktbeschreibung und Funktion:	Behälter für CLEARPOINT Gewindefilter

### **Druckgeräte-Richtlinie 2014/68/EG**

Angewandtes Konformitätsbewertungsverfahren:	Modul A
Kategorie:	I
Beschreibung der Druckgeräte:	Druckgeräte für Fluide der Gruppe 2

Der Hersteller trägt die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung.

Unterzeichnet für und im Namen von:

Neuss, 22.07.2016

**BEKO TECHNOLOGIES GMBH**

i.V. Christian Riedel  
 Leiter Qualitätsmanagement International

**BEKO TECHNOLOGIES GMBH**  
 Im Taubental 7  
 41468 Neuss

GERMANY

Phone: +49 2131 988-0  
 www.beko-technologies.com



## EU Declaration of Conformity

We hereby declare that the products named below comply with the stipulations of the relevant directives and technical standards. This declaration only refers to products in the condition in which they have been placed into circulation. Parts which have not been installed by the manufacturer and/or modifications which have been implemented subsequently remain unconsidered.

Product designation:	Vessel for threaded filter CLEARPOINT® ...
Type:	M020, M022, M023
Maximum operating pressure:	16 bar (g)
Product description and function:	Vessel for CLEARPOINT threaded filter

### Pressure Equipment Directive 2014/68/EC

Applied conformity assessment procedure:	Module A
Category:	I
Description of the pressure equipment:	Pressure equipment for fluids of Group 2

The manufacturer shall have sole responsibility for issuing this declaration of conformity.

	Signed for and on behalf of:
Neuss, 22.07.2016	<b>BEKO TECHNOLOGIES GMBH</b>

i.V. Christian Riedel  
 Head of International Quality Management

**BEKO TECHNOLOGIES GMBH**  
Im Taubental 7  
41468 Neuss

GERMANY

Tel: +49 2131 988-0  
www.beko-technologies.com



## EU-Konformitätserklärung

Wir erklären hiermit, dass die nachfolgend bezeichneten Produkte den Anforderungen der einschlägigen Richtlinien und technischen Normen entsprechen. Diese Erklärung bezieht sich nur auf die Produkte in dem Zustand, in dem sie von uns in Verkehr gebracht wurden. Nicht vom Hersteller angebrachte Teile und/oder nachträglich vorgenommene Eingriffe bleiben unberücksichtigt.

Produktbezeichnung:	Behälter für Gewindefilter CLEARPOINT® ...
Modelle:	M025, M027, M030, M032
Max. Betriebsdruck:	16 bar (g)
Produktbeschreibung und Funktion:	Behälter für CLEARPOINT Gewindefilter

### Druckgeräte-Richtlinie 2014/68/EU

Angewandtes Konformitätsbewertungsverfahren:	Modul A2
Kategorie:	II
Beschreibung der Druckgeräte:	Druckgeräte für Fluide der Gruppe 2
Notifizierte Stelle:	TÜV NORD Systems GmbH & Co. KG Große Bahnstraße 31 22525 Hamburg
Zertifikatsnummer:	07/202/1410/Z/0237/17/D/0035

Die Produkte sind mit dem abgebildeten Zeichen gekennzeichnet:

**CE0045**

Der Hersteller trägt die alleinige Verantwortung für die Ausstellung dieser Konformitätserklärung.

Unterzeichnet für und im Namen von:

Neuss, 01.09.2017

**BEKO TECHNOLOGIES GMBH**

  
i.V. Christian Riedel  
Leiter Qualitätsmanagement International



**BEKO TECHNOLOGIES GMBH**  
Im Taubental 7  
41468 Neuss

GERMANY

Phone: +49 2131 988-0  
www.beko-technologies.com



## EU Declaration of Conformity

We hereby declare that the products named below comply with the stipulations of the relevant directives and technical standards. This declaration only refers to products in the condition in which they have been placed into circulation. Parts which have not been installed by the manufacturer and/or modifications which have been implemented subsequently remain unconsidered.

Product designation:	Vessel for threaded filter CLEARPOINT® ...
Type:	M025, M027, M030, M032
Maximum operating pressure:	16 bar (g)
Product description and function:	Vessel for CLEARPOINT threaded filter

### Pressure Equipment Directive 2014/68/EU

Applied conformity assessment procedure:	Module A2
Category:	II
Description of the pressure equipment:	Pressure equipment for fluids of Group 2
Notified body	TÜV NORD Systems GmbH & Co. KG Große Bahnstraße 31 22525 Hamburg Germany
Certificate number:	07/202/1410/Z/0237/17/D/0035

The products bear the CE Mark:

**CE0045**

The manufacturer shall have sole responsibility for issuing this declaration of conformity.

Signed for and on behalf of:

Neuss, **01/09/2017** BEKO TECHNOLOGIES GMBH

i.V. Christian Riedel  
Head of International Quality Management





**BEKO TECHNOLOGIES GmbH**

Im Taubental 7  
 D - 41468 Neuss  
 Tel. +49 2131 988 0  
 Fax +49 2131 988 900  
 info@beko-technologies.com

**DE****BEKO TECHNOLOGIES LTD.**

Unit 11-12 Moons Park  
 Burnt Meadow Road  
 North Moons Moat  
 Redditch, Worcs, B98 9PA  
 Tel. +44 1527 575 778  
 info@beko-technologies.co.uk

**GB****BEKO TECHNOLOGIES S.à.r.l.**

Zone Industrielle  
 1 Rue des Frères Rémy  
 F - 57200 Sarreguemines  
 Tél. +33 387 283 800  
 info@beko-technologies.fr

**FR****BEKO TECHNOLOGIES B.V.**

Veenen 12  
 NL - 4703 RB Roosendaal  
 Tel. +31 165 320 300  
 benelux@beko-technologies.com

**NL****BEKO TECHNOLOGIES  
(Shanghai) Co. Ltd.**

Rm. 606 Tomson Commercial Building  
 710 Dongfang Rd.  
 Pudong Shanghai China  
 P.C. 200122  
 Tel. +86 21 508 158 85  
 info.cn@beko-technologies.cn

**CN****BEKO TECHNOLOGIES s.r.o.**

Na Pankraci 58  
 CZ - 140 00 Praha 4  
 Tel. +420 24 14 14 717 /  
 +420 24 14 09 333  
 info@beko-technologies.cz

**CZ****BEKO Tecnológica España S.L.**

Torruella i Urpina 37-42, nave 6  
 E - 08758 Cervelló  
 Tel. +34 93 632 76 68  
 Mobil +34 610 780 639  
 info.es@beko-technologies.es

**ES****BEKO TECHNOLOGIES LIMITED**

Unit 1010 Miramar Tower  
 132 Nathan Rd.  
 Tsim Sha Tsui Kowloon Hong Kong  
 Tel. +852 5578 6681 (Hong Kong)  
 +86 147 1537 0081 (China)  
 tim.chan@beko-technologies.com

**HK****BEKO TECHNOLOGIES INDIA Pvt. Ltd.**

Plot No.43/1 CIEEP Gandhi Nagar  
 Balanagar Hyderabad  
 IN - 500 037  
 Tel. +91 40 23080275 /  
 +91 40 23081107  
 Madhusudan.Masur@bekoindia.com

**IN****BEKO TECHNOLOGIES S.r.l**

Via Peano 86/88  
 I - 10040 Leini (TO)  
 Tel. +39 011 4500 576  
 Fax +39 0114 500 578  
 info.it@beko-technologies.com

**IT****BEKO TECHNOLOGIES K.K**

KEIHIN THINK Building 8 Floor  
 1-1 Minamiwatarida-machi  
 Kawasaki-ku, Kawasaki-shi  
 JP - 210-0855  
 Tel. +81 44 328 76 01  
 info@beko-technologies.jp

**JP****BEKO TECHNOLOGIES Sp. z o.o.**

ul. Pańska 73  
 PL - 00-834 Warszawa  
 Tel. +48 22 314 75 40  
 info.pl@beko-technologies.pl

**PL****BEKO TECHNOLOGIES S.E.Asia  
(Thailand) Ltd.**

75/323 Soi Romklao, Romklao Road  
 Sansab Minburi  
 Bangkok 10510  
 Tel. +66 2-918-2477  
 info.th@beko-technologies.com

**TH****BEKO TECHNOLOGIES Co.,Ltd**

16F.-5 No.79 Sec.1  
 Xintai 5th Rd., Xizhi City  
 New Taipei City 221  
 Taiwan (R.O.C.)  
 Tel. +886 2 8698 3998  
 info.tw@beko-technologies.tw

**TW****BEKO TECHNOLOGIES CORP.**

900 Great Southwest Pkwy SW  
 US - Atlanta, GA 30336  
 Tel. +1 404 924-6900  
 Fax +1 (404) 629-6666  
 beko@bekousa.com

**US**